?????? ????????(Synchronizing Set)





Synchronizing Set ???? :96*96 ? 144*144 mm Voltmeter scale: 0-1200 V ?????? : 50-60 Hz

???? ???? ???? ???? ???? ???? **????**

22 2222 22222 222 2222 22222

???

Code:

Flush mounting Synchronizing set, 96x96F96GSD?

Flush mounting Synchronizing set with Checking Synchroscope, 96x96F96GSC?

Flush mounting Synchronizing set, 144x144F14GSD?

Flush mounting Synchronizing set with Checking Synchroscope, 144x144F14GSC?

, 96x96Pivoted housing Synchronizing setF96GND?

, 96x96Pivoted housing Synchronizing set with Checking SynchroscopeF96GNC?

, 144x144Pivoted housing Synchronizing setF14GND?

, 144x144Pivoted housing Synchronizing set with Checking SynchroscopeF14GNC?

, 96x96Synchronizing setWall mounting F96GBD?

, 96x96 Synchronizing set with Checking SynchroscopeWall mountingF96GBC?

, 144x144Synchronizing setWall mounting F14GBD?

, 144x144 Synchronizing set with Checking SynchroscopeWall mountingF14GBC?

Synchronizing set, 96x96Differential Flush mounting F96DSD?

Synchronizing set with Checking Synchroscope, 96x96 Differential Flush mounting F96DSC?

Synchronizing set, 144x144 Differential Flush mounting F14DSD?

Synchronizing set with Checking Synchroscope, 144x144 Differential Flush mounting F14DSC?

, 96x96Pivoted housing Differential Synchronizing setF96DND?

, 96x96Pivoted housing Differential Synchronizing set with Checking SynchroscopeF96DNC?

, 144x144Pivoted housing Differential Synchronizing setF14DND?

, 144x144Pivoted housing Differential Synchronizing set with Checking SynchroscopeF14DNC?

, 96x96Synchronizing set Wall mounting Differential F96DBD?

, 96x96 Differential Synchronizing set with Checking SynchroscopeWall mountingF96DBC?

, 144x144Synchronizing set Wall mounting Differential F14DBD?

, 144x144 Differential Synchronizing set with Checking SynchroscopeWall mountingF14DBC?

??????? ??

???? ???? ???? ???? ???? ?????.

// //